

YAMAHA

VOLUME PEDAL

VP-500

OPERATION MANUAL

■ SPECIFICATIONS

- Main Volume (Pedal) x 1
- Minimum Volume x 1
- IN Jack x 1
- OUT Jack x 1
- TUNER OUT Jack x 1
- Dimensions (W x H x D) 86x57x200mm(3-3/8"x2-1/4"x7-7/8")
- Weight 465g(16oz)

* Specifications are subject to change without notice.

YAMAHA CORPORATION
P.O. Box 1, Hamamatsu, Japan
Printed in Japan


Thank you for choosing a YAMAHA VP-500 Volume Pedal. The VP-500 is a compact volume pedal designed to accept the output from high-impedance instruments such as electric guitar and bass. For maximum versatility the VP-500 features a minimum volume control and a tuner output jack.

■ OPERATION

1. Connect the output from your guitar to the VP-500 IN jack.
2. Connect the OUT jack of the VP-500 to the input jack of your amplifier or effect unit.
3. Press the pedal all the way down and set the maximum desired volume using the amplifier volume control.
4. With the pedal all the way up, use the Minimum Volume control on the VP-500 to set the minimum desired volume level. Rotating the Minimum Volume control clockwise increase the minimum volume level — i.e. the total pedal volume control range is decreased.

■ USING A TUNER

An electronic guitar tuner can be connected to the VP-500 TUNER OUT jack, and used to tune the guitar connected to the IN jack when the pedal is all the way up (the minimum volume position).

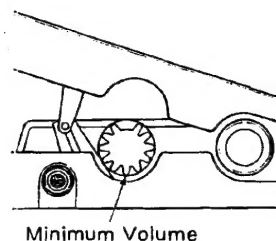

■ CONNECTION

Guitar Amplifier

